

Compatible remote controls - not a complete list, many fixed code and learning code remotes not on the list can also be copied.

<i>Company</i>	<i>Frequency</i>	<i>Models</i>	<i>Photo</i>
ADYX	433.920	ALIZE EM2C, ALIZE EM4C	
AETERNA	433.920	TX433 1,2,4 buttons	
ALLMATIC	433.920	AEMX1, AEMX2, AEMX4	
		EUROPE AUTO ARMY2, ARMY1, ARMY4	
		MX1, MX2, MX4	
ALLTRONIK	433.920	S429_1, S429_2, S429_4, S429_M Be sure that your remote operates at 433.92MHz!	
		S425	
ANSONIC	433.920	SA 434-1E, SA434-2E, SA434-3E, SA434-4E	
		SA 434-1MINI, SA434-2MINI, SA 434-2Midi	
APERTO	433.920	CPS1, CPS2, CPS4	
AVIDSEN	433.920	100601 micromark MM23164	
		104505	
		100951, 100955, 100550, 100400	






BANDY	433.920		
BELFOX	433.920	DHS433-1, DHS433-2, DHS433-4, dip switch version	
		DHS 433,92 (7733), dip switch version	
BENINCA'	433.920	LOT1W, LOT2W, LOT4W	
		LOT2WMS	
		T2WK, T4WK	
		LOTX1W, LOTX2W, LOTX4W	
		TO.GO2WP, TO.GO4WP, TO.GO2WK, TO.GO4WK	
BESIDE	433.920	BEZAP	
		HIT	
BFT	433.920	TE01, TE02 (TEO1, TEO2)	
		TE04 (TEO4)	
CAME	433.920	T432, T434, TOP432A, TOP434A, TOP432, TOP432NA, TOP434NA	
		TOP432M, TOP434M	

		TAM432SA	
		TOP432SA	
		TOP432NA	
		TWIN2, TWIN4	
CARDIN	433.920	S476 TX2, S476TX4	
CASALI GENIUS	433.920	Genius 433 2, Genius 433 3, JA400 TM433, JA401 TM433	
CASIT	433.920	ERTS92B, ERTS92T	
		ERTS20DB, ERTS20DQ	
		ERTS476D, ERTS476Q	
		TXS1, TXS2, TXS3, TXS4, TXS6 ERTS97B, ERTS97T	
CELINSA	433.920	S10 1, S10 2, SAW1, SAW2	
CENTURION	433.920	CLASSIC, SMART, SMART2	
CPS	433.920	TCP3, CPS, Jolly 4	
		CPS1 TCP3, CPS2 TCP3, CPS4 TCP3 EM1CV, EM2CV, EM4CV	
DASPI	433.920	Happy2, Pops2Ã,	
DEA	433.920	433 1, 433 2, 433 4	

		Genie	
		Punto S2	
		Dea MIO TD2, MIO TD4	
DELMA	433.920	Mizard 433 1, Mizard 433 2	
		King 433 2	
		Style Copy 2CH (this is a code duplicator)	
DICKERT	433.920	MAHS433 01, MAHS433 04	
		S10-433A1L00, S10-433A4L00, S20-433A1L00, S20-433A4L00, S20-433A1000, S20-433A4000	
		S5-433-A2L00, S5U-433-A2L00	
DITEC	433.920	GOL4C	
		GOL4 Note: These transmitters are rolling code and cannot be duplicated, but if you have a GOL4C device, you can duplicate it on ACLUS or PANDIS, and it works with all the DITEC receivers.	
		BIX LS2, BIX LP2, BIX LG4 Note: These transmitters are rolling code and cannot be duplicated, but if you have a GOL4C device, you can duplicate it on ACLUS or PANDIS, and it works with all the DITEC receivers.	
DOITRAND FDOITRAND	433.920	MPSTF2E JAUNE, MPSTF4E, HYPERPHONE MPSTF2E_GRISE	

		TS2DE, TS4DE	
DOORMATIC	433.920	SAW	
DUCATI ALLDUCKS	433.920	TSAW1, TSAW2, TSAW3, TSAW4, 124 ELBER TSAW1, TSAW2, TSAW3, TSAW4 RONDY TSAW1, RONDY TSAW2, RONDY TSAW3	
		TPR10-A, TPR20-A RONDY TPR10_A, RONDY TPR20_A	
		TE2	
		HC6203, 6203: only blue , red and transparent	
ELBE	433.920	501, 502, 504	
		502a, 504a	
		502, 504	
ELCA	433.920	IRIS, IRIS 9CH. Both colors red and blue	
		ASTER2	
		Aster 1000, Aster1001. Colors: black, blue, light grey	
		GEMINI 9CH	
		VIRGO	

ELVOX	433.920		
		ET03, ET04	
ERONE	433.920	SETDS39433E2, SETDS39433E4	
FAAC	433.920	TM1 433 DS, TM2 433 DS, TM3 433 DS	
		TML2 433 SLP, TML4 433 SLP, TML2-433-SLP, TML4-433-SLP	
FADINI BPT	433.920	433 2M, Astro43_2m	
		Astro433-2, Astro433-4, Astro43-2, Astro43-4	
FERPORT	433.920	Tac1, Tac2, Tac4, Tac1k, Tac2k, Tac4k, Tac2kr	
GIBIDI	433.920	Open TMB 433, OPEN TMQ 433, OPEN OUT 2, OPEN OUT 4	
GULLIVER	433.920	MDW 2E	
HAUSS	433.920	Pocket 3750-1, Pocket3750-2, Pocket 3750-4	
HORMANN HOERMANN HÄfÄrman	433.920	HSM2, HSM4, yellow buttons	
HRC	433.920		
JAY	433.920	UBEI x1 SL1	

		UBET 11, UBET 21, UBET 31, UBET 41, UBET 61Ã,	
KING	433.920	Note: receiver should be setup withrolling code feature disabled	
LABEL IUPPITER	433.920	RJW/1E, RJW/2E, RJW/4E, RJW/12E	
		MDW/1E, MDW/2E	
LEB	433.920	TMW	
		TSAW2N, TSAW4N	
		TCP3Ã, (this is a code duplicator)	
		TRK4 Note: receiver should be configured to disable rolling check.	
		TPW4	
LINCE	433.920	LR 2035	
MA SYSTEM	433.920	MA TX1, MA TX2, MA TX3	
MARANTEC	433.920	D101	
		D12	
		D212, D222, D232	
		Digital 302, D302	




		Digital 304, D304	
MEIÄfÅ,NER MEISSNER	433.920	LW433-1, LW433-2, LW433-4	
		Pocket 3750 1, 2, 4	
MONSEIGNEU R	433.920	ARC2, ARC4	
		TDR 400 3845, TDR 400 3846, TDR 400 3847 T1SAW433, T2SAW433, T4SAW433	
MOTORLINE STATEUROP	433.920	MX1, MX2, MX3, MX4, MX6 MX11, MX12, MX13	
MOTOSTAR	433.920	CLIKSTAR2, CLICKSTAR4 CLICK-4M, CLICKSTAR RE 532, CLICKSTAR RE 534	
NICE	433.920	FLO1, FLO2, FLO4	
		VERY VE	
NOLOGO	433.920	ECO DIP	
OG	433.920	OG62, OG64	
O&O OeO, O and O	433.920	T-COM DS 4-2, T-COM DS 4-4	
OPENOUT	433.920	TMQ 433 2, TMQ 433 4	
PIAZZETTA	433.920	4 buttons for wood/pellet heater	

PORTAMATIC	433.920	MPH01, MPH02	
POWERFIX Profi (Lidl)	433.920	RCB-A 3600R	
PRASTEL	433.920	MPSTF2E, MPSTF4E	
PROEM	433.920	ER2C4ACM, ER4C4ACM	
PROGET	433.920	ETY_433N2, ETY 433N4	
		EMI433-N2	
PROTECO	433.920	TX433	
		EUROMATIC	
		HIT	
QUASAR	433.920	433 TANGO SLIM BLEU	
SEA	433.920	SMART433_TX2_DIP, SMART433_TX3_DIP SMART433_TX2_COPY, SMART433_TX3_COPY Smart2 Dip Switch, Smart3 Dip Switch	
SEAV	433.920	TXS1, TXS2, TXS3, TXS4	
		Behappy S1, Behappy S2, Behappy S3	
		Be Easy TX, Be Easy Murale2	

		BeSmart S2, BeSmart S4	
		BeFree S1	
SECURVERA	433.920	SV R2C	
		SV R2C	
		SV R4C	
		SV R6C	
SENDER	433.920		
SERAI	433.920	OG/52, OG/54, OG/82, OG/84	
		OG/28, OG/48, OG/62, OG/64	
		OG/02, OG/04	
SICE	433.920	TX4 CLACK Bigfoot	
SIMINOR	433.920	ER2C4ACM, ER4C4ACM, ER2C4ACS, ER4C4ACS	
SMD	433.920	LW433-1, LW433-2, LW433-4 : AM models only	
SOMFY	433.920	LEB TMW	
STAGNOLI	433.920	ZEUS AZTR	

STARTEC	433.920	TXQ2	
TAU	433.920	250 SLIM, 250K-SLIM, 250K-SLIMC	
		250TXD2, 250TXD4	
		250BUG2, 250BUG4	
		250T-4, 250T-4C	
TECNOMATIC	433.920	TQ433	
TEDSEN BERNER GFA	433.920	SKX1MD, SKX2MD, SKX3MD, SKX4MD	
		SKX1KD, SKX2KD, SKX4KD, SKX6KD	
		SKX1DL, SKX2DL, SKX3DL, SKX4DL	
		SKX1LC, SKX2LC, SKX3LC, SKX4LC	
		SKX1SL, SKX2SL, SKX3SL, SKX4SL	
		SKJ	
		SKX1WD, SKX2WD, SKX4WD, SKX11WD, SKX22WD, SKX44WD	
TELCOMA	433.920	TANGO 2 SW, TANGO4 SW	
			

		TANGO BLUE 2, TANGO 4 BLUE, TANGO BLEU 2, TANGO BLEU 4	
		TANGO 2 SLIM, TANGO 4 SLIM	
		TANGO WIN3	
		TANGO2, TANGO4	
TKC	433.920	TSAW433	
TORAG	433.920	S429 1, S429 2, S429 4	
TORMATIC DORMA	433.920	HS, Dorma HS43 1E, HS43 2E, HS43 3E, HS43 4E	
		MAHS, Siebau, Novoferm, Dorma	
		MHS, MHS43-1	
TREMA	433.920	TO93TV1, TO93TV2, TO93TV4	
TUBAUTO	433.920	DIGITAL 101 433	
V2	433.920	PHOENIX series: Phoenix2, Phoenix2P, Phoenix4, Phoenix4P. Note:the receiver should be programmed with the rolling code feature disabled. When the code is learned, LED will blink for 6 times to highlight that the code is rolling.	
		TCP3	

		TCP3, ARC3	
		TCP3	
		TPR	
		T1SAW/433, T2SAW/433, T4SAW/433	
		TRR1, TRR2, TRR4	
		PMR2, PMR4	
VISONIC	433.920	WT 100, WT 100A, WT 101, WT 101A, WT 102, WT 104, WT 201, WT 201A, WT 201WP, WT 201AWP	 
VSEG	433.920	CR SLIM	
WAINE-DALTON	433.920	S429-1, S429-2, S429-4, S429-mini	 
		S425	
WECLA CDS	433.920	433, 433_2	