


**The VDP1434 is delivered in a plastic sleeve for protection and easy assembly.**  
**Please remove the sleeve only *AFTER* the coupling is inserted on the motor's axle.**

**Insert coupling and sleeve assy on the motor's axle**



**Please place the sleeve on a hard surface and push the motor down with about 5 kgf. until the sleeve touches the motor's bushing (see pic.3.)**

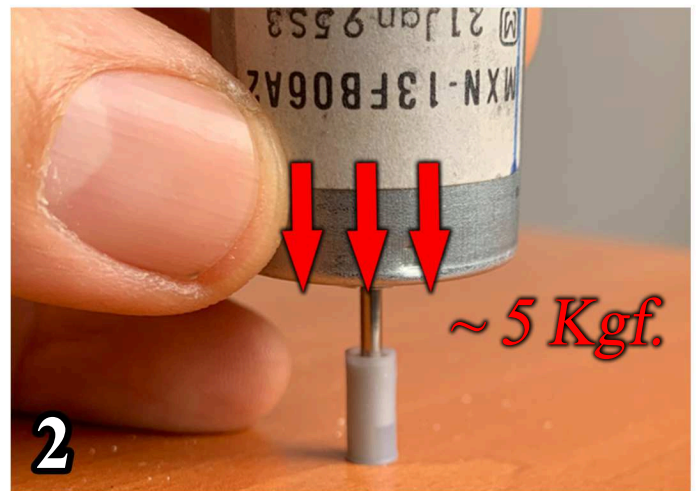

**Remove the sleeve and insert the Worm Gear on the coupling.**